

Standard Current Transformer 10:1 (10A), 100:1 (220A), 250:1 (660A)

Type CT-3FRO

Instruction Manual

Table of contents

- 1 Safety precautions**
 - 1.1 Safety
 - 1.2 Safety precautions
 - 1.3 Impaired Safety Precautions
- 2. Introduction**
 - 2.1 Function Principle
 - 2.2 Design of the Measuring System
- 3. Technical Data**
 - 3.1 Ordering Information
- 4. Operation**
 - 4.1 Measuring Arrangements
 - 4.2 Measurement Procedure
- 5. Servicing**


1 Safety precautions

1.1 Safety

The instrument described in this manual is designed to be used by properly trained personnel only. Adjustment, maintenance and repair of the exposed equipment should be carried out only by qualified personnel aware of the hazards involved.

1.2 Safety precautions

For correct and safe use of this instrument it is essential that both operation and service personnel follow generally accepted safety procedures in addition to the safety precautions specified in the manual. Specific warning and caution statements, where they apply, will be found throughout the manual. Safety is the responsibility of the user.

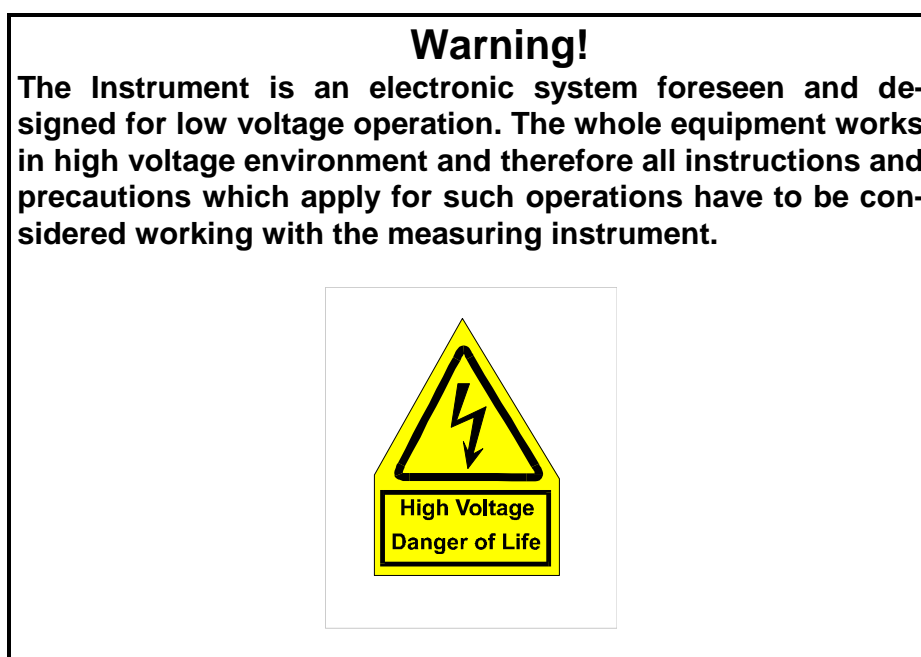


1.3 Impaired safety precautions

Whenever it is likely that safety protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation. Safety protection is likely to be impaired if, for example, the instrument fails to perform the intended measurements or shows visible damage.

2. Introduction

2.1 Function Principle

The unit is made from a magnetic current transformer/Comparator and an electronic compensation unit:

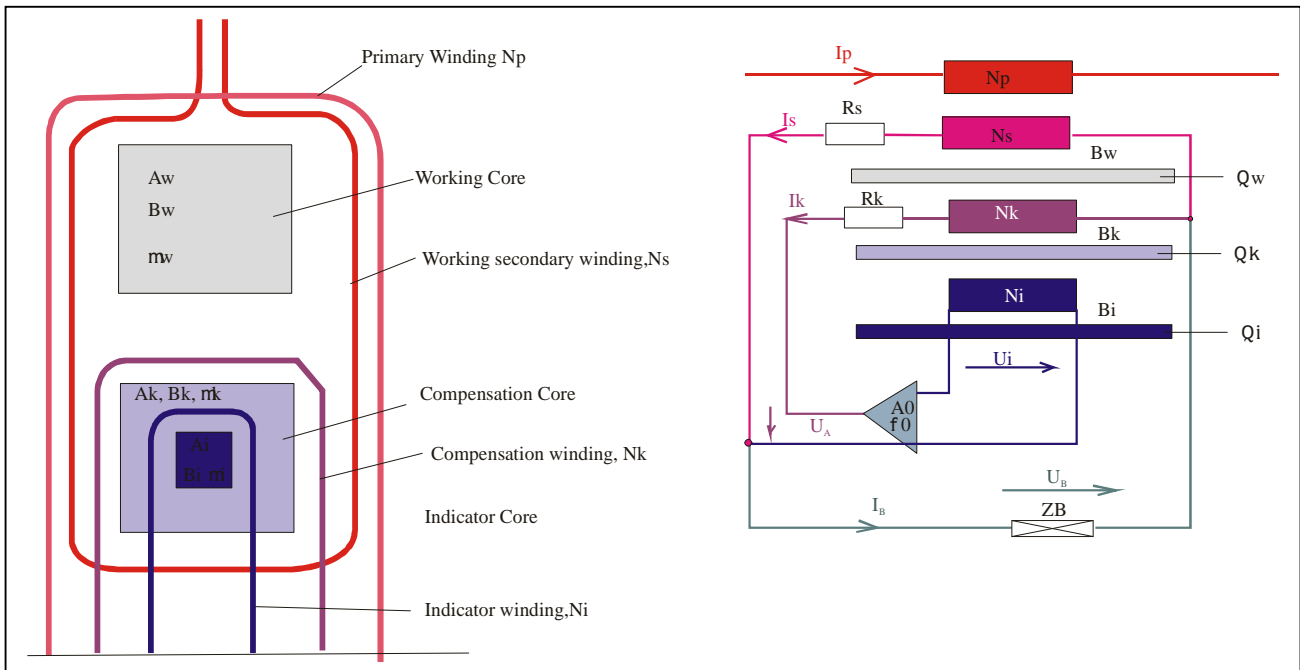

The primary current flows in the winding N_p and magnetizes all the three cores:

- Q_w Working core
- Q_k Compensation core
- Q_i Indicator core

The secondary working winding (N_s) sends a current to the Burden of the transformer. The magnetizing effect of the secondary current is subtracted from the magnetizing of primary.
 The N_i "Indicator winding" detects a voltage proportional to the difference of magnetizing and with the high gain amplifier A_0 sends a compensating current to the compensating winding N_k .
 This regulation loop trends to reduce the allover magnetizing in the cores N_k and N_i and because the I_k is fed to the output, the overall input current makes a "zero flux" CT.
 By it the errors will be lower

3. Technical Data

3.1. Specification in Reference Range


Secondary nominal current	5 A
Primary ratios and nominal currents	1:10/10A , 1:100/220A ; 1:250/660A
Working range	1 ... 100% of nominal current
Rated frequencies	50 and 60 Hz
Tolerance of the ratio	± 10 ppm
Tolerance of the phase	± 10 μrad
Allowed maximal Burden on the secondary	2.5 VA

Weight	approx. 29.5 kg
Dimensions	B:530mm/20.9 inch ; H:490mm/19.3 inch ; T:280mm/ 11 inch
Mains Supply	230V/50 Hz 50 VA

Reference conditions:	
Temperature	23 ° C ± 2 ° C
Humidity, not condensing	40 ... 75%
Barometric pressure	70 ... 106 kP
Rated range of use	
according to standard IEC 359	
Temperature	10 ° C ... 40 ° C
Barometric pressure	70 ... 106 kPa

4 Operation

4.1 Connections

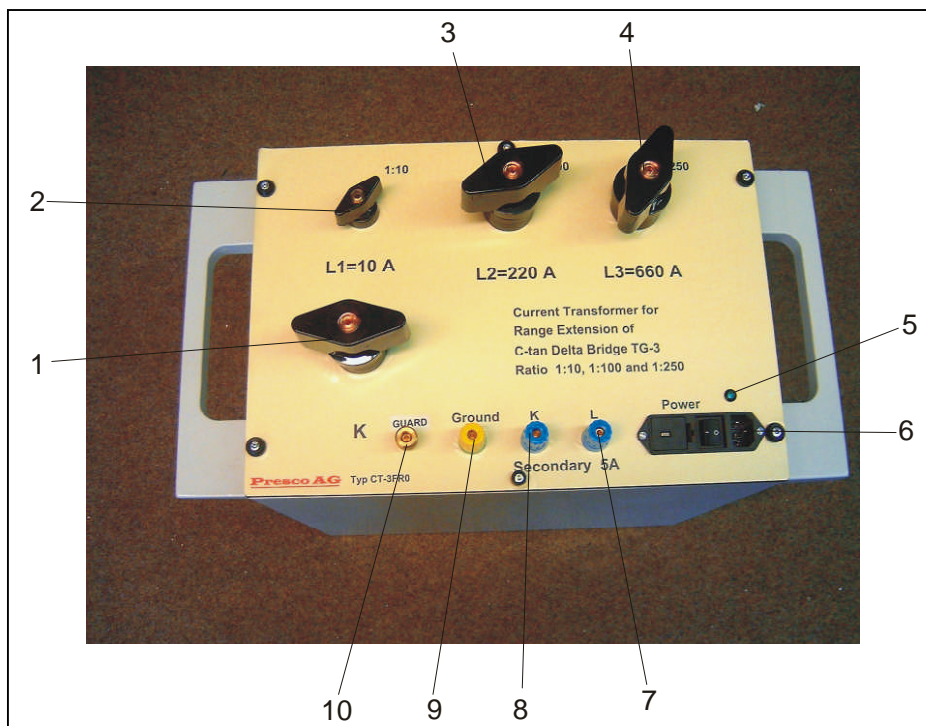

Legend:

1. "K" Common point of primary windings
2. Terminal primary "L1", ratio 1:10, Nominal current 10A
3. Terminal primary "L2". ratio 1:100, Nominal current 220 A
4. Terminal Primary, "L3", ratio 1:250, Nominal current 660 A
5. Power control light
6. Power connector 230V, 1 A
7. Terminal secondary "l", Nominal current 5A
8. Terminal secondary "k", Nominal current 5A, for correct working do ground this terminal
9. Ground: the ground conductor of power line connector
10. Guard: The terminal of the Screen between primary and secondary

5 Servicing

Repair work and maintenance can only be done by qualified personnel of Presco AG. In case of problems please contact the representative which delivered the instrument or Presco AG directly.